

RITELLO[®]
THE ULTIMATE PURIFICATION SYSTEM

OWNER'S MANUAL

MAXIMUS
— EDITION —



REGISTER your Ritello at www.ritello.com

Your Ritello uses Water "Mother Nature's Way" to trap the unwanted dust & dirt in your home.

Dear Ritello Owner,

THANK YOU for purchasing the Ritello Home Purifier!

Librex, the proud maker of the Ritello system has over 35 years of experience in the Water Purification systems. Its latest invention is the Ritello R2 series **"MAXIMUS EDITION"**, the most advanced cleaning system on the market today.

Your new system is suitable for home or office use. Your Ritello is now equipped with the latest technology, capacitive touch buttons, gesture control, in addition to many other advanced features to enhance your cleaning experience.

This latest Ritello R2 series **"MAXIMUS EDITION"** is engineered and designed in Germany, this product represents the pinnacle of precision, quality, and innovation, offering unmatched reliability and performance.

LIMITED WARRANTY (Register your Ritello on www.ritello.com)

Librex provides to its Authorized Distributors a written **5 YEARS WARRANTY** on its Ritello System with its related accessories. The warranty does not cover the neutralizer or normal wear and tear arising from usage of the products. Further, Librex requires each Authorized Distributor in turn to pass through to the customer (end-user) a written warranty same as received from Librex, in order for the customer to benefit from such warranty on the Ritello product. Furthermore, Librex, as the manufacturer, does not deal directly with the consumer nor provide the consumer with a written warranty, the law imposes certain responsibilities on all manufacturers who make consumer products. The products must not be defective and must be generally fit for their intended uses. These implied warranties of merchantability are honored by Librex. Kindly take your time and read carefully all the installation instructions and precautionary measures prior to operating the machine. Periodic maintenance is required in order for the unit to perform effectively.

Warranty Disclaimer Librex, in its capacity as the manufacturer, and Ritello International hereby expressly disclaim and shall not be held liable for any extended warranty, lifetime warranty, or warranty obligations of any kind other than those expressly issued in writing by Librex. Any extended warranty, lifetime warranty, or similar representation offered, marketed, or otherwise provided by third parties, including but not limited to Independent dealers, Independent distributors, or independent agents, is made solely at the discretion of such third parties. Librex and Ritello International shall bear no responsibility or obligation to honour, support, or enforce such warranties, whether expressed or implied.



RITELLO IS CERTIFIED BY THE CENTER OF PREVENTATIVE MEDICINE IN GERMANY

CERTIFICATE



The Center of Preventative Medicine - ZPmed®
certifies that the product:

Ritello R2 series

from the product category:

Room Cleaning Systems

by the company
Librex Holding s.a.l.
complies with the requirements of preventative medicine
as being a health product.
This product is considered suitable for health care.



READ YOUR OWNER'S MANUAL CAREFULLY

Inside this manual you will find helpful information on how to maintain your Ritello in its best working condition.

TROUBLESHOOTING TIPS

You will be able to solve most common issues by following simple instructions in the troubleshooting section.

CUSTOMER SERVICE

In case you find yourself unable to find answers in the troubleshooting section, do not hesitate to contact the local distributor from whom you purchased your Ritello. Contact information may be found on the back cover of this manual. Or, you may then contact our Headquarters via www.ritello.com or info@librex.com

RITELLO CUSTOMER IDENTIFICATION NUMBER

After Ritello goes through the quality control check at the factory, it is then serial numbered for the following purposes:

- . **OWNERSHIP** identification
- . **WARRANTY** identification for your distributor
- . **ASSURANCE** of passing quality control and is a genuine Librex product

All new Ritellos should be sold with a serial number at the location shown at the accompanying diagram. If the number is missing, Librex makes no claim as to the origin, age, or condition of the unit. If you cannot find the serial number, please contact our Customer Service Department at info@librex.com

- p 1 Librex Message & Written Warranty
- p 2 Ritello Customer Identification Number
- p 3 Important Safety Measures
- p 4 Ritello's Parts Identification
- p 5 Quick Start Guide (R2 series)
- p 6 Operation Tips
- p 7 Get Familiar with the Ritello Tools
- p 8 Care & Cleaning Tips
- p 9 Care & Cleaning Tips
- p 10 Troubleshooting Main Unit
- p 11 Description of the Powerbrush
- p 12 Powerbrush - Important Safety Instructions
- p 13 Powerbrush - Important Safety Instructions
- p 14 Assembling & Operating the Powerbrush
- p 15 Cleaning with the Powerbrush
- p 16 Powerbrush Troubleshooting Guide
- p 17 More Optional Ritello® Accessories
- p 18 Notice to Ritello Owners



The SERIAL NUMBER comprises of 7 digits.

Please visit www.ritello.com or **download the Ritello Consumer App** for how-to videos, answers to frequently asked questions.

**DOWNLOAD
OUR NEW APP!**



Kindly **READ CAREFULLY** the following precautions prior to using the Ritello system. Use only **GENUINE Ritello PARTS**. For **INDOOR** use only.

1. Connect the unit to an outlet with a matching voltage rating.
2. Do not pull or carry by cord. Use indoors only. Keep electric cord away from sharp edges and heated surfaces.
3. If unit is damaged, not working properly, has been dropped, left outdoors or dropped into water, return it to your distributor for checkup.
4. Your Ritello is equipped with a cord winding system. Do not try to push the cord in by force. Simply, pull gently on the cord to retract it back in the lower compartment.
5. Do not clean any burning or smoking materials such as cigarettes, hot ashes or matches. Do not use your machine for cleaning flammable liquids such as fuel and do not use it in places where these materials exist. Additionally do not use your machine with wet hands.
6. Ritello is equipped with a safety button to prevent operation if the basin is not properly installed. **DO NOT ATTEMPT TO OVERRIDE THIS SAFETY FEATURE.**
7. Unplug your machine before maintenance and cleaning process.
8. Unplug the Ritello when not in use. Turn it off at the main switch. Grasp the plug to disconnect it from the wall outlet to avoid damage to cord. Do not pull or carry by cord - Do not use cord as a handle - Do not close a door on cord. Do not run the appliance over its cord. Keep cord away from heated surfaces. Do not use the Ritello or its accessory to unplug drains. If sewer gas is drawn into the Ritello, it could cause damage.
9. Never touch a metal sink, cold or hot water pipe with one hand while touching the metal parts of any electrical appliance. Your body could complete an electrical circuit to the ground. Do not handle plug or appliances with wet hands.



CAUTION

The vacuum cleaner accessories such as current carrying hose with motorized cleaning head and spray unit with pump contain electrical connections and they are not a serviceable part, better to be replaced.

This device is not expected to be used by persons (including children) that don't have the physical, sensory, mental capacities, experience and knowledge, unless supervised by persons that are responsible for their safety, and have provided them with proper monitoring and instructions concerning the use of the machine.

Children should be supervised to ensure they do not play with the machine. In case the power cable is damaged, solely the manufacturer, the service agent, or a similarly qualified person must replace it, in order to avoid any danger.

The Ritello hose contains electrical connections!

- . Do not immerse in water for cleaning
- . The hose should be checked regularly and must not be used if damaged
- . Do not immerse handle in liquid for cleaning. Use electrified hose only with Ritello accessories or on carpet moistened by the Ritello cleaning process.

- Download a soft copy of this Owner's Manual at www.ritello.com or contact customerserv@librex.com to receive it by email.

Correct Disposal of this Product







This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

- . "This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved."
- . "Cleaning and user maintenance shall not be made by children without Adult supervision."



1. Main Unit
2. Cord Winder
3. Exhaust Vent
4. Tool Caddy
5. Touch Screen
6. Handle
7. Gesture Control
8. Power Brush Electric Plug
9. Silencer
10. Water Basin Lock
11. Water Basin
12. Dolly



13. Dolly Pedal
14. Mini PowerBrush
15. Air Blower
16. Coil Stick
17. Floor, Wall & Rug Brush
18. Electric Extended Wands
19. Crevice Tool
20. Dusting Brush
21. Upholstery Tool
22. Vac-Bag
23. Electric Hose (Pistol Handle)
24. Aquamop (Microfiber cloth)

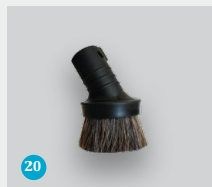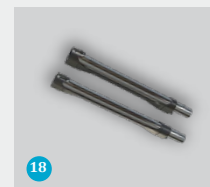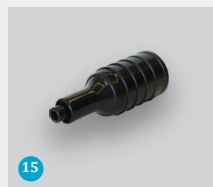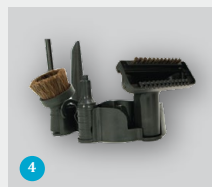

To purchase accessories or replacement parts, please contact an Authorized Ritello Distributor:
Info@librex.com

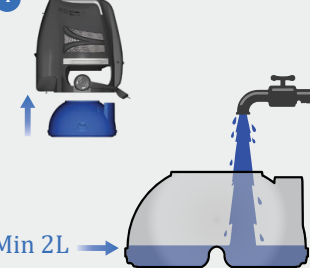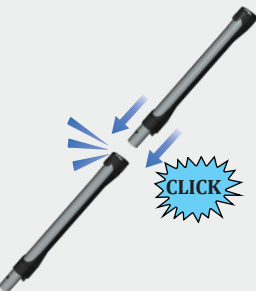1 	2 	3 	4 	5 
6 	7 	8 	9 	10 
11 	12 	13 	14 	15 



1. AIR CLEANING

Your Ritello Cleans the Air, not only your Floors & Furnishings. With pollution on the rise (specifically indoors), it is essential to wash the indoor-air with water. Simply, pour water into the water basin up to the Minimum level, then select the First Speed and let the Ritello purify the ambient air for you and your family.




2. HUMIDIFY & AROMATIZE

During certain periods of the year, the indoor air becomes dry and unpleasant. Turn your Ritello ON while using only the main unit without any tools or the hose, add a few drops of the Ritello perfumes into the water-basin and smell the air instantly freshened. (Use only genuine Ritello fragrances in the water basin)



3. AIR WASH TIMER

To activate your Ritello's Air Wash Timer for 30 minutes, press the "TIMER ICON" button until the first bracket lights up. Each bracket is an additional 30 minutes.

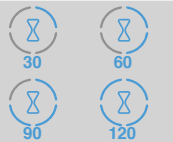

3.a) To increase the time for 60, 90 or 120 minutes

To run the Unit for 60 minutes, press again the "TIMER ICON" button, for the 2nd bracket to light on. Repeat again for the 90 and 120 minutes. (Do not increase the speed - Timer works only on the 1st speed mode)



4. Gesture Control

Activating the Gesture Control

Press the "Gesture Control" button to light up the circle around it. Wave your hand to the right to turn "ON" the Ritello or increase its speed. Wave to the left to decrease the speed or turn it "OFF".




5. ATTACHMENT CADDY

To keep your Ritello accessories handy, slip the Attachment Caddy at the backside of the Ritello onto the 2 slides located on both sides. Press downward to lock in place. Insert each tool in its designated place as indicated by its resembling icon.

Touch & Touchless Screen

Simply press on the main button, to turn On/Off the Unit, the (+ & -) buttons to increase or decrease the Speeds, in addition, you can set the Timer to Wash your Indoor Air for 30, 60, 90 or 120 minutes..

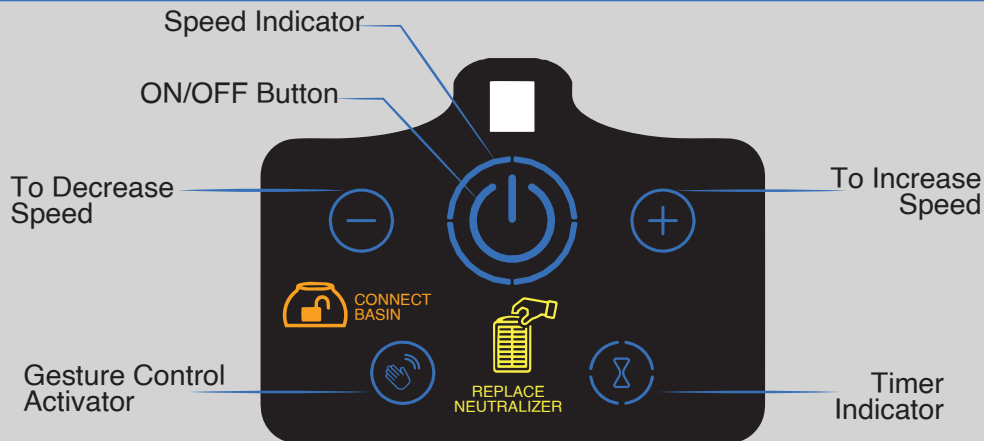



FLOOR & WALL BRUSH WITH RUG GLIDER

To be used for cleaning Hardwood floors, tiles or walls. Attach it to the cleaning Tubes. Select the desired speed for best cleaning performance. To clean small area rugs, attach the Rug Glider for smooth cleaning



DUSTING BRUSH

Ideal to clean lampshades, curtains, TV-screen, baseboards, sound systems, artificial plants, and frames. Attach it on the small metal extension of the hose or the cleaning tubes.



UPHOLSTERY TOOL

To clean upholstery, chairs, draperies, carpeted stairs, pillows, blankets, and most fabric surfaces.



CREVICE TOOL

The crevice tool reaches between the furniture cushions, under and between the radiators, and the hard to reach places such as window edges.



PERFUMES

A selection of 4 different scents used to aromatize your home/ office during cleaning tasks. Simply, pour in few drops into the Water basin, turn ON the unit and experience the smell of a garden right inside your premises.



CLEANING TUBES

Connect the tubes into the short metal-end of the hose.



BLOWER TOOL

Ideal for inflating balloons (birthday parties), beach-balls, inflatable toys, and air mattresses. By inserting the hose on the exhaust (located on the back side of the main unit's body) the blowing air can serve also to blow-away dust from hard to clean areas such as your keyboard, etc.



COIL STICK

The Coil Cleaner can reach areas such as refrigerator coils, between and under appliances, cabinets or furniture. Also, can be used for either suction or blowing mode. To use for blowing, open the exhaust vent door at the back of the unit. Attach the hose to the exhaust opening. Attach the coil on the blower tool and thereafter both pieces on to the metal extension of the hose.



MINI POWERBRUSH (MPB) Optional

MPB is ideal for stairs and upholstery, even on mattresses for picking up dead skin and reducing dust-mites. It has a rotating electric-brush. Use it at 4th carpet speed for best performance.



VAC-BAG

This zipper lock bag is sized to fit your largest cushions. By placing items inside the bag, you can suck the dust from the inner parts of the pillows. To "fluff" your cushion with clean water-washed air, simply connect the hose to the air exhaust.



MAINTAINING YOUR NEUTRALIZER

(Every 18 months or in case of a loss of Airflow)

- Remove the small top cover
- Use a screwdriver to remove the screw
- Pull the Neutralizer-housing out
- Rinse the Neutralizer using COOL CLEAN WATER from the faucet (Do not use soap or any detergents)
- Shake the Neutralizer vigorously with open face down (Do not hit it on sharp edges) to remove excess dirt or water
- Reinstall the Neutralizer and top cover by following the steps in reverse order (Do not operate the unit without the neutralizer in place).

DRYING THE NEUTRALIZER

- Insert a dry cloth into the **air outlet grille**.
- Switch the appliance **ON**.
 - * Operate for **30 minutes at Low Speed**, or
 - * Operate for **10 minutes at High Speed**.
- After drying, verify the appliance's cleaning performance.
 - * If performance remains unsatisfactory, **contact your local distributor**.

REASSEMBLY AFTER DRYING

- Ensure the **Neutralizer is completely dry**.
- Reinstall the **Neutralizer**.
- Reattach the **top cover**, following the disassembly steps in reverse order.
- Warning:** Do not operate the appliance without the neutralizer installed.

THE NEUTRALIZER IS NOT A STANDARD ITEM ON ALL RITELLO UNITS.

CAUTION

Unplug the unit before servicing your Neutralizer.



UNCLOG THE HOSE IN CASE OF OBSTRUCTION

When you notice a loss of airflow while using the hose, there may be an object inside the hose clogging it. To clear the obstruction, connect the hose coupling to backside at the exhaust air opening, making sure the hose is well attached. Simultaneously, place the hose handle tube into the air intake opening at the front of the Ritello; turn the unit on and shake the hose to help any dirt stuck in the hose to flow and be trapped inside the Ritello water basin.



The REPLACE NEUTRALIZER signals every 500 hours of use. It serves as a reminder to check if your NEUTRALIZER requires cleaning or replacement. To replace your NEUTRALIZER, It is recommended to purchase it from an Authorized Ritello Service Center, guaranteeing genuine Ritello products.

To clear the “Replace NEUTRALIZER” signal from the display screen, press and hold the “ON” button for 7 seconds until the message disappears.




ALWAYS EMPTY & CLEAN THE WATER-BASIN

Do not clean too long with one filling of water. Rinse and dry the water-basin thoroughly. It is recommended to change the water frequently when doing a total cleaning for the house or office.



Wash the inside of the water basin and dry thoroughly using a soft cloth.

After done cleaning with your Ritello, remove the water-basin and dump away the dirty water before storing the unit.

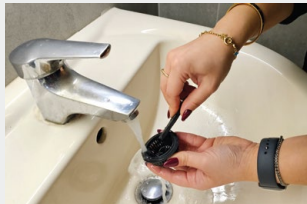

REMOVE & CLEAN THE SEPARATOR

Once per month, check if the separator is dirty. To clean it, use the tiny brush found in the slot of the bottom part inside the Main Unit (wash & brush with cool water). If necessary, use a wrench to loosen the nut of the separator.

CLEAN & DRY FLANGE UNDER THE SEPARATOR

After cleaning it, immediately place the separator back on the main unit (hand-tighten) in order for the unit to operate correctly.

Do not force the separator onto the threaded shaft.

CAUTION

Do not trap substances such as oil, grease, powder, soot, ceramic, dry wall dust and any toxic materials.

NEVER OPERATE THE RITELLO WITHOUT WATER INSIDE ITS WATER BASIN (MIN. 2L).

Each Ritello appliance has been carefully inspected. If a minor issue develops, kindly follow the below troubleshooting tips that may help identify and correct the issue. If unable to resolve the issue, contact a Ritello Distributor for service. Any service procedure not listed below should be performed by an Authorized Ritello Distributor or Service Center.

PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
Ritello Main Unit is not operating	Air intake could be plugged with debris Unit not well assembled Ritello not properly attached on water basin Defective cord, switch or machine Water basin not in place	Clean off debris carefully Check all pieces and fasten the lock handle firmly Make sure unit is properly positioned in place Contact your local ritello distributor service center Ensure all pieces are in place
Insufficient Airflow	Machine not well assembled Plugged attachments, wand, hose, or powerbrush Unit running at low speed Neutralizer needs cleaning or replacement Separator is dirty	Ensure unit is properly seated and attached Remove debris from clogged area Increase the unit's speed to desired task Remove the neutralizer housing, clean or replace it Remove separator and brush/wash with cool water
Insufficient Filtration	Water level low in water pan Excessive dirty water inside pan Broken neutralizer	Fill the water pan to indicated level Change water frequently during long cleaning Contact your local ritello distributor or service center
Heavy Foaming in Water Basin	Soapy contaminant in basin Water basin overfilled with water	Replace water and clean the water basin Fill the water basin to correct level as indicated
Bad Odor	Water basin not well cleaned Separator clogged or dirty Humid neutralizer	Clean water basin and use ritello's perfume while cleaning Remove and clean Refer to maintaining the neutralizer on page 8
Machine Overheating or Burnt Odor	Plugged wand, hose, or powerbrush Unit not attached properly onto water basin	Remove debris from clogged area Ensure that unit is properly seated and well attached by its latches
Different Sound or Vibration	Separator clogged or dirty Over filled basin	Remove and clean Empty and refill to the indicated level



The POWERBRUSH is only available as an OPTIONAL accessory. For more information, contact an Authorized Ritello Distributor.

When using an electrical appliance, always observe basic safety precautions including the following:

INTENDED USE

- The Powerbrush is a motorized accessory designed especially for Ritello.
- This Powerbrush must only be used for indoor purposes to vacuum and brush dry floor surfaces. Do not use on people or animals.
- The Powerbrush is not intended for use by persons which lack physical, sensory, mental abilities or experience with the machine. Individual should not use it without supervision or instruction by a responsible person.
- Before using the Powerbrush, Electro hose, and the Electro-tubes, do check for externally visible damage. Do not operate damaged parts under any circumstances.
- All repair work should be performed by a qualified technician in accordance with national and local safety regulations.
- Do not allow the vacuum cleaner or Powerbrush to get wet. Clean only with a dry or slightly damp cloth. The plug connectors must not come in contact with water.

CHILDREN

Do not allow the vacuum cleaner to be used as a toy. Close attention is necessary when used near children.

USE

- To avoid risk of injury while vacuuming, do not reach into the moving beater bar while the Powerbrush is in operation. Danger of injury.
- Keep loose items, such as drapes, scarves, and other clothing away from the Powerbrush. They could be sucked up into the Powerbrush and wound around the beater bar.
- Do not vacuum up items which are heavy, hard or have sharp edges. They could cause a blockage and damage the Powerbrush.
- Do not vacuum anything that is burning or smoking such as cigarettes, matches or hot ashes. The vacuum could catch fire.
- Do not use the Ritello to pick up any flammable or combustible liquids such as gasoline or use in areas where they may be present.
- Do not use the PowerBrush to pick up liquids or damp dirt. This could impair the electrical safety. Wait for freshly shampooed carpets to dry.



WARNING: To avoid risk of electrical shock, NEVER pick up water or any other fluids with the PowerBrush.



CAUTION: Use the PowerBrush for dry pick-up only. Do not use outdoors or on wet surfaces.



CAUTION: Never pick up hard or sharp objects with the Ritello PowerBrush. Items such as pins, hairpins, tacks, crayons and pencil stubs may cause damage to the brush roll or belt.



CAUTION: Always make sure your Ritello is unplugged before attaching your PowerBrush to it.



CAUTION: Always disconnect unit from electrical supply when servicing.



ASSEMBLY

Insert the bottom of the Stainless Tube with male end down into the opening pivot neck of the PowerBrush. Press the tube downward until button lock clicks. Connect the Electrified hose onto the upper part opening of the tube.



HEIGHT ADJUSTMENT

You can select one of 5 brush distances from the floor. The selected setting will be displayed.

Setting 1 - Closest to the floor

Setting 5 - Highest distance from the floor

OPERATION

- Plug in the Ritello.
- Turn the Ritello power switch to highest speed.
- To unlock the PowerBrush neck, press with your left foot on the release pedal. Next, pull the tube assembly backward.
- Squeeze the trigger on pistol grip hose handle to activate the PowerBrush. Release trigger to turn Power off.
- Roll the PowerBrush slowly back and forth over carpet and watch the dirt disappears.
- To lock PowerBrush into the upright position, grab the tube assembly and push forward until tube assembly and pivot neck are locked into the PowerBrush body.
- To disconnect the PowerBrush from the tube, press with your foot on the neck pedal and pull the tube upwards.





ON/OFF SWITCH ON THE HANDLE

The Electric-hose is equipped with a switch on its handle-pistol, which allows the Powerbrush to be turned on and off separately.

**The PowerBrush is an OPTIONAL ACCESSORY.*

For more information, contact an Authorized Ritello Distributor.




USING THE POWERBRUSH

For best results, move the Powerbrush slowly back and forth over the carpet. Carpet fringes can be brushed flat if you carefully glide the Powerbrush in the proper direction (from the carpet toward the floor).

CLEANING THE CARPETS & LARGE RUGS

Use the PowerBrush. This heavy-duty nozzle removes the deep rooted dirt from the carpets and large rugs. The Ritello PowerBrush has five-position height adjustment to meet virtually any carpet cleaning need. For short/slick threads start at position 1, and increase to level 5 for shaggy carpets/rugs.

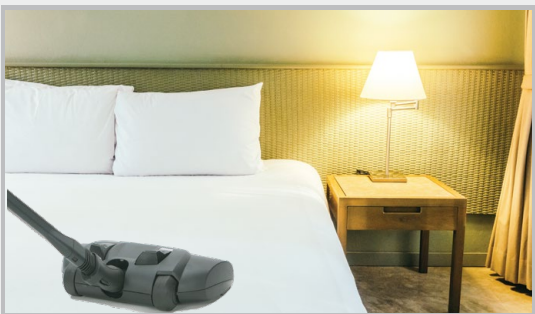

CLEANING THE BEDDING

The mattresses and pillows can be deeply cleaned with the Ritello Cleaning System. With the Ritello PowerBrush, hairs, dead skin, dust mites, crumbs and other particles can be completely removed.

** Clean vigilantly on fine linens and soft bedding - may cause damage.*

PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
PowerBrush motor is not running	Handle trigger/switch is not activated Tubes not connected Tube connections not connected Automatic motor protector reset has tripped	Squeeze trigger in electrified hose handle Ensure tubes are properly connected Make sure tubes are correctly attached Turn Ritello off and leave it for 30 seconds, then turn Ritello back on
PowerBrush motor is running but brush-roll is not turning	Belt is damaged	Contact an Authorized Ritello Distributor or Service Center for a belt replacement
PowerBrush roll cannot be rotated by hand	Object blocked in brush roll compartment Bearing worn out	Disconnect power; Remove foreign object; Make sure brush rotates freely Contact an Authorized Ritello Distributor or Service Center for a replacement brush roll
PowerBrush is not picking up dirt well	Clogged air intake Blocked tubes or hose Bristles not in contact with carpet	Disconnect power; clean out the whole intake area Disconnect power; clean out; reconnect to Ritello and ensure air is flowing freely through hose Make sure to adjust the PowerBrush position to suit the carpet's fibers length

For more information about these products, please contact an Authorized Ritello Distributor.

AQUAJET



The AquaJet carpet cleaner can help remove tough stains. Use the Ritello Carpet Cleaning solution with the AquaJet for superior cleaning results.

SQUEEGEE



The squeegee (hard/soft brush) is another optional nozzle-head that can be connected on the AquaJet body to clean & mop bare floors. Turn the sponge side over and use the Squeegee Rubber Blade to dry-off the floors.

MINI POWERBRUSH



The Mini PowerBrush is a light-weight electric-nozzle made specifically to clean smaller surfaces such as upholstery, stairs and car interiors.

PURELLO



COMING SOON

The Purello offers a breath-of-fresh-air inside your premises. Pour a few drops of the Ritello fragrance into the Purello water basin and experience the smell of the garden right inside your place.

SPRAY-GUN & FOAMER



Fill water in the Spray-Gun bottle, attach it to the hose, then plug-in the hose on the exhaust of the Main Unit, turn the Ritello ON. Connect the foamer attachment onto the Spray-Gun then fill it with Ritello liquid shampoo (70% water & 30% shampoo), in order to create dry suds, then scrub the upholstery, replace the hose on the intake of the main unit in order to pick up the sprayed shampoo.

AQUABRUSH



To wash your upholstery or your carpeted stairs, attach the AquaBrush onto the AquaJet tube, then spray the shampoo, scrub and turn the Ritello ON in order to remove stains.



NOTICE

- . Please use Original Ritello Fragrances and Ritello Shampoo Liquids Only.
- . Using other formulated solutions may create chemical reaction and harm the Plastic of your Water Basin.
- . Never Operate your Ritello without Water.

CERTIFIED FOR YOUR PROTECTION



Standard Fragrances



Premium Fragrances



Deodorizer



Carpet Shampoo

Ritello® system is a LIBREX Product. It is sold by Librex to its AUTHORIZED RITELLO® DISTRIBUTORS for resale by those DISTRIBUTORS and their AGENTS SOLELY THROUGH DEMONSTRATIONS TO ULTIMATE USER-OWNERS. Any product purchased in any other sales channel is not covered by the Manufacturer's or any Authorized Distributor's warranty.



**FOR SUPPORT OR SERVICE PLEASE CONTACT
YOUR LOCAL RITELLO DISTRIBUTOR**

NAME

ADDRESS

CITY

COUNTRY

TELEPHONE

EMAIL

POSTAL CODE

a Librex[®]
product

PLEASE VISIT OUR WEBSITE
info@librex.com
www.ritello.com